




2001 CMC 310.0

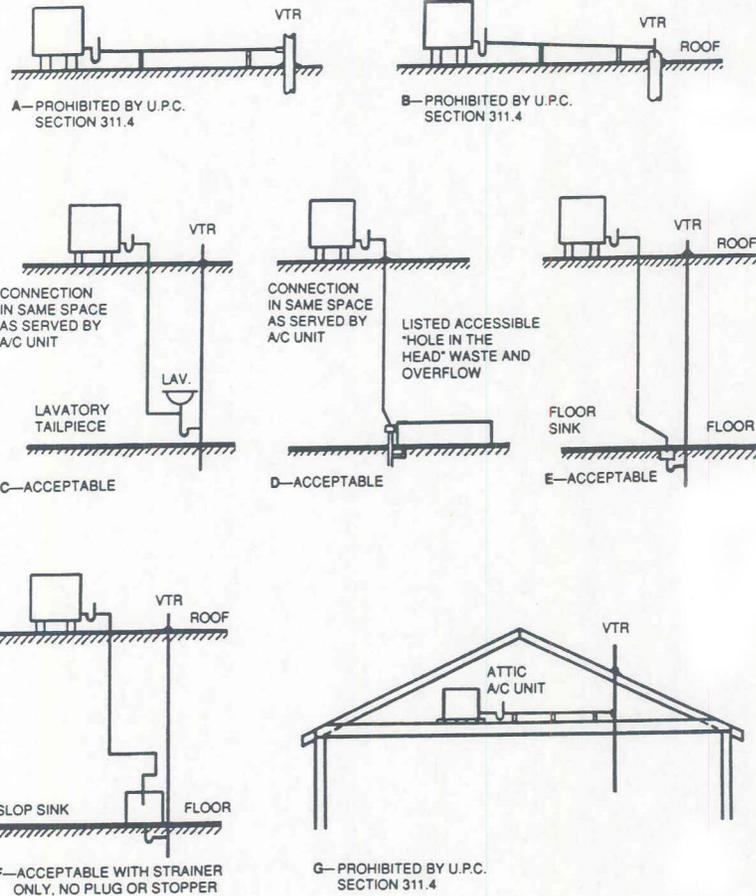

TRAPS TO BE INSTALLED WHEN REQUIRED BY MANUFACTURER'S INSTALLATION INSTRUCTIONS AND U.P.C. SECTION 803.
NOTE: "VTR" MEANS (PLUMBING) VENT THROUGH ROOF.

CONDENSATE DRAIN TERMINATIONS