WATER HEATER BRACHING CORNER

2007 UPC 508.2

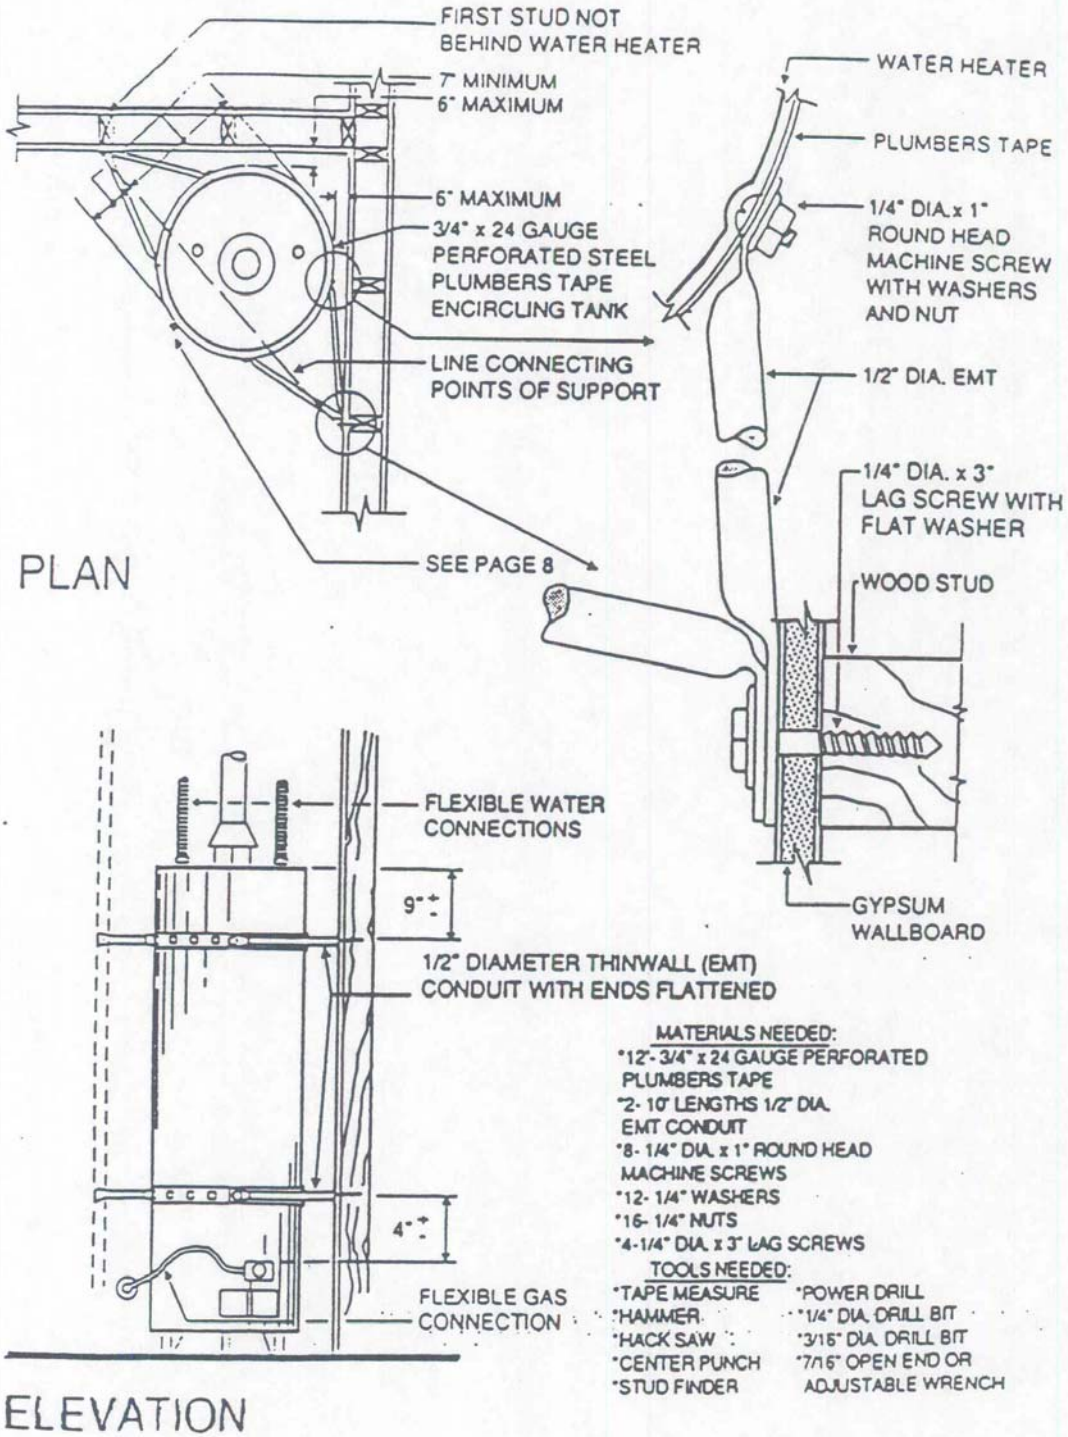

MATERIALS NEEDED:
- 12'- 3/4" x 24 GAUGE PERFORATED PLUMBERS TAPE
- 2- 10' LENGTHS 1/2" DIA. EMT CONDUIT
- 8- 1/4" DIA. x 1" ROUND HEAD MACHINE SCREWS
- 12- 1/4" WASHERS
- 16- 1/4" NUTS
- 4-1/4" DIA. x 3" LAG SCREWS

TOOLS NEEDED:
- TAPE MEASURE
- HAMMER
- HACK SAW
- CENTER PUNCH
- STUD FINDER
- POWER DRILL
- 1/4" DIA. DRILL BIT
- 3/16" DIA. DRILL BIT
- 7/16" OPEN END OR ADJUSTABLE WRENCH